

KST-10 Fail Safe Unit



Set-up:

1. Turn on your transmitter and power to your receiver.
2. From your transmitter throttle, set the amount of brake you would like applied to the throttle/brake servo when Failsafe is activated from loss of signal or battery power.
3. While holding this throttle position from your transmitter, push and hold the "set" button on the Failsafe for 2 seconds until the red LED is illuminated. The Failsafe position is the same for both battery and signal Failsafe.